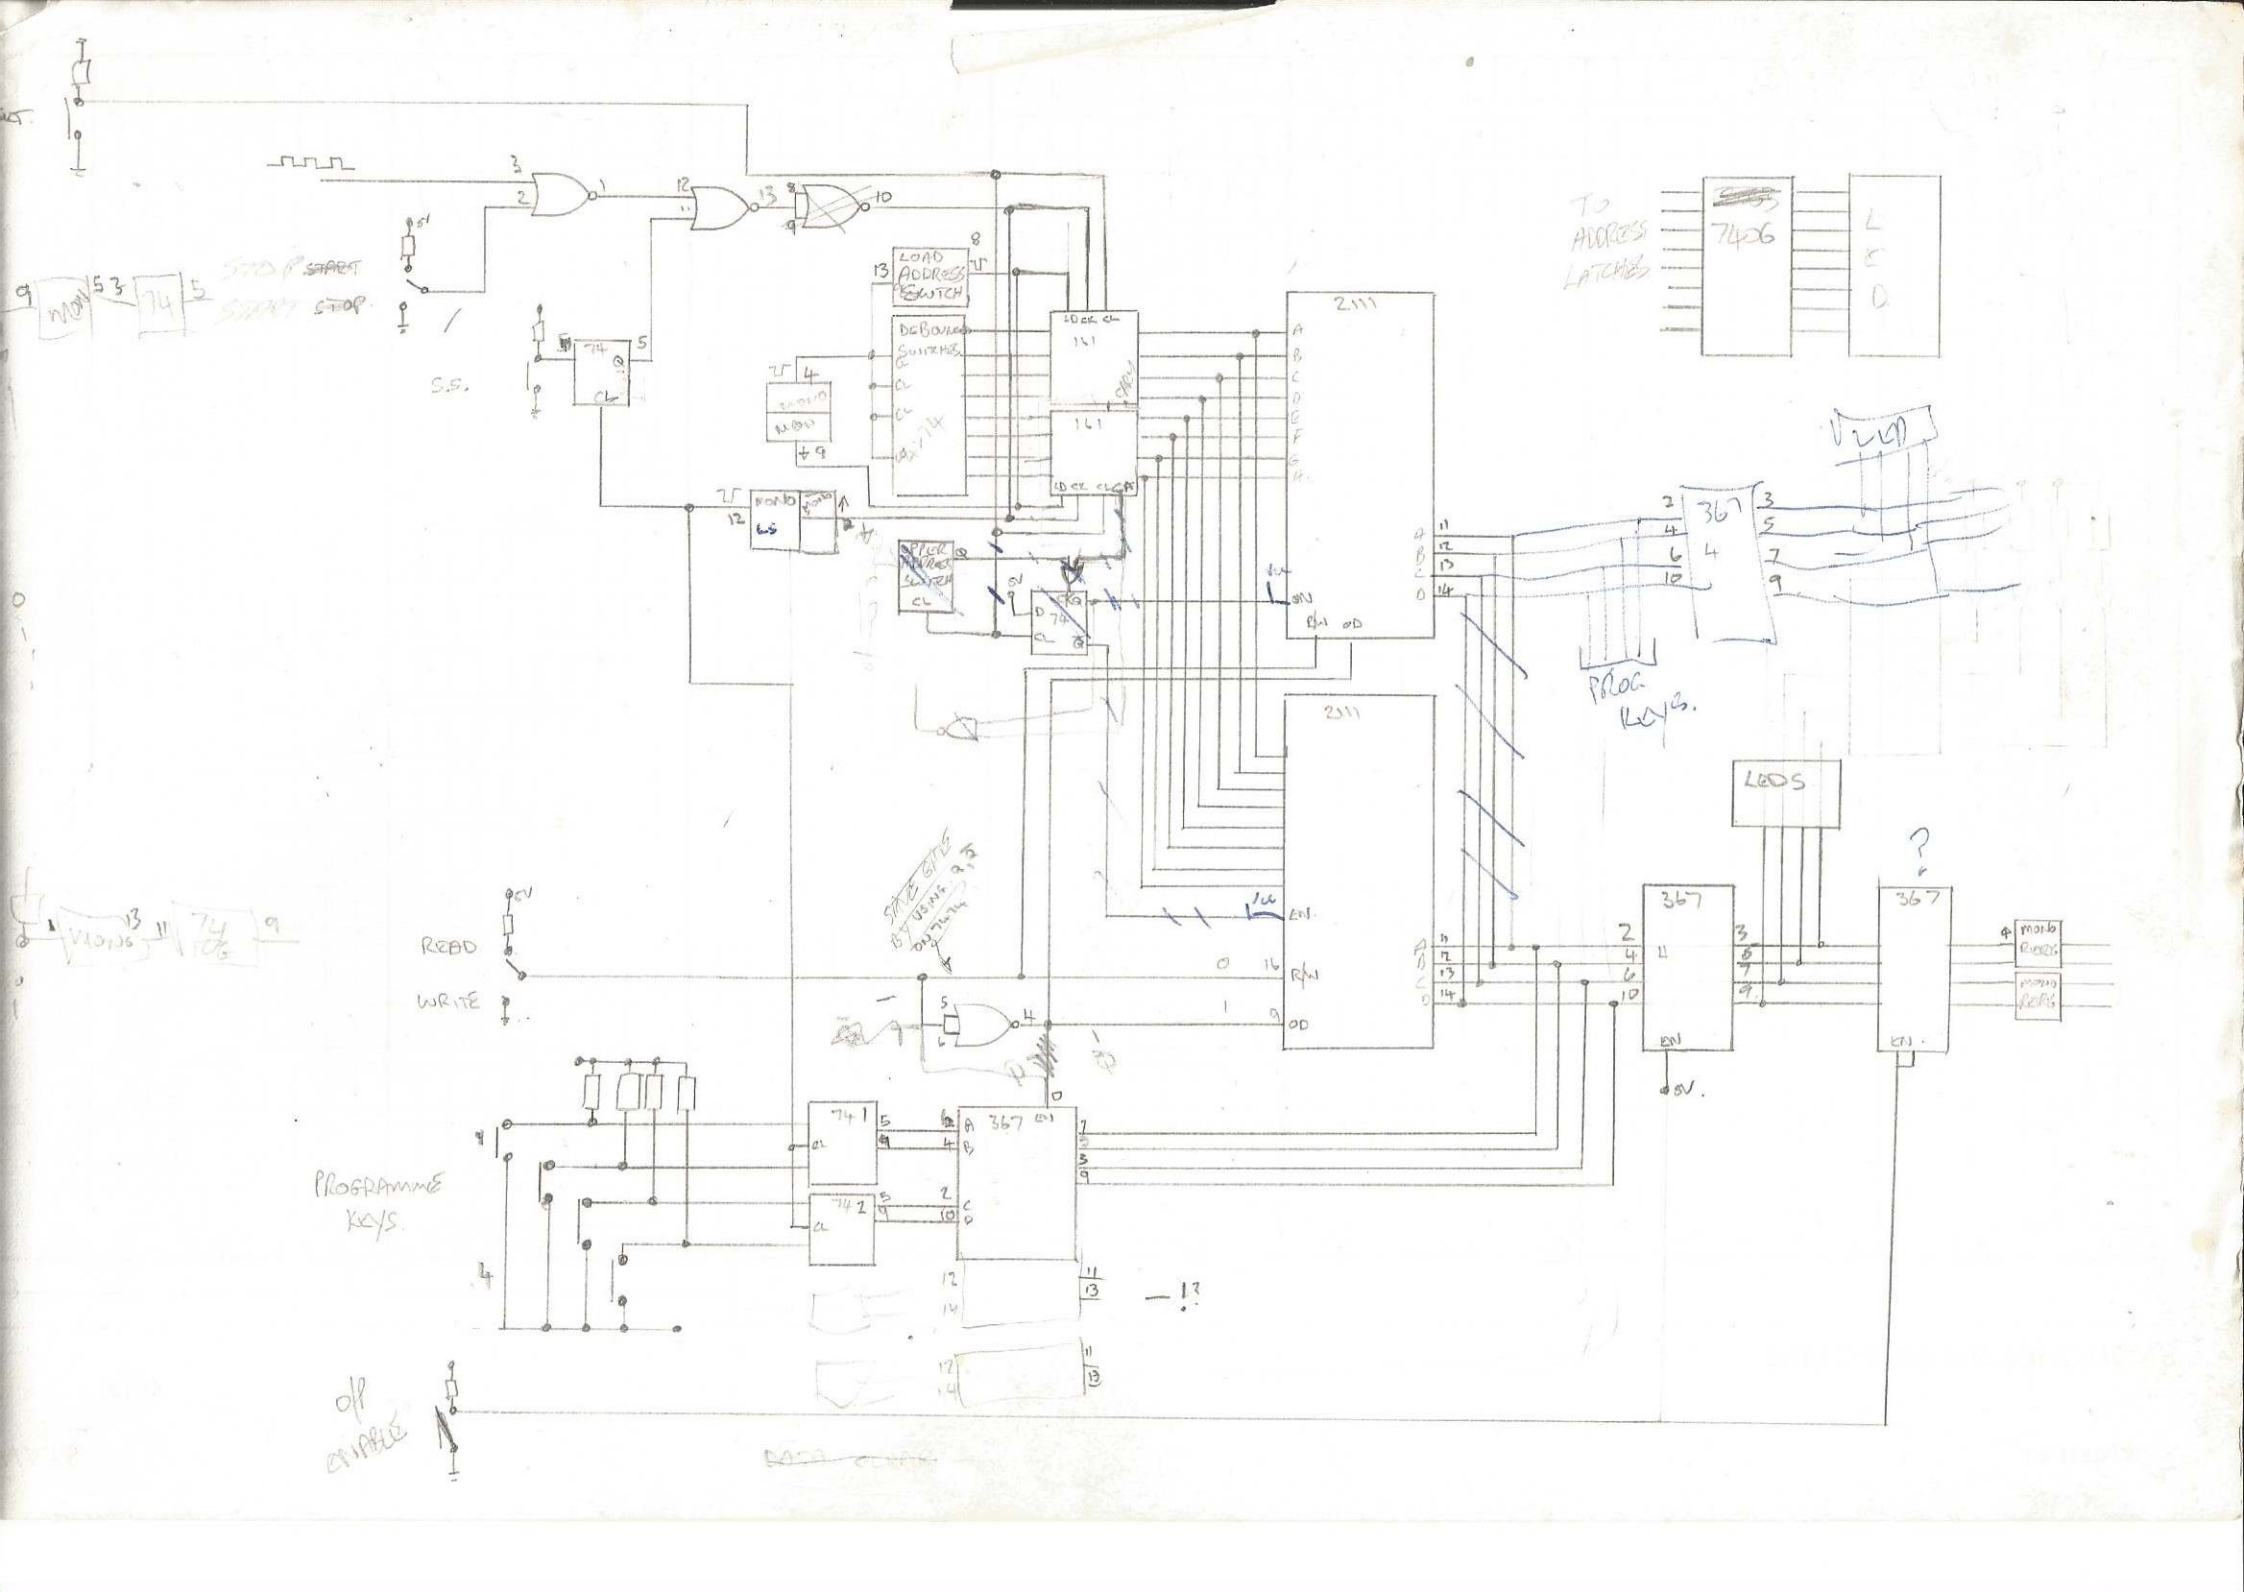
LOAD ADDRESS SWITCH
DEBOUNCED SWITCHES
2111
161
161
74
367
367
367
7426
TO ADDRESS LATCHES
PROG. KEYS.
LEDS
READ
WRITE
PROGRAMME KEYS.
741
742
START
STOP
S.S.
RAM
EN
OD
CL
CK