


CARTRIDGE CASING

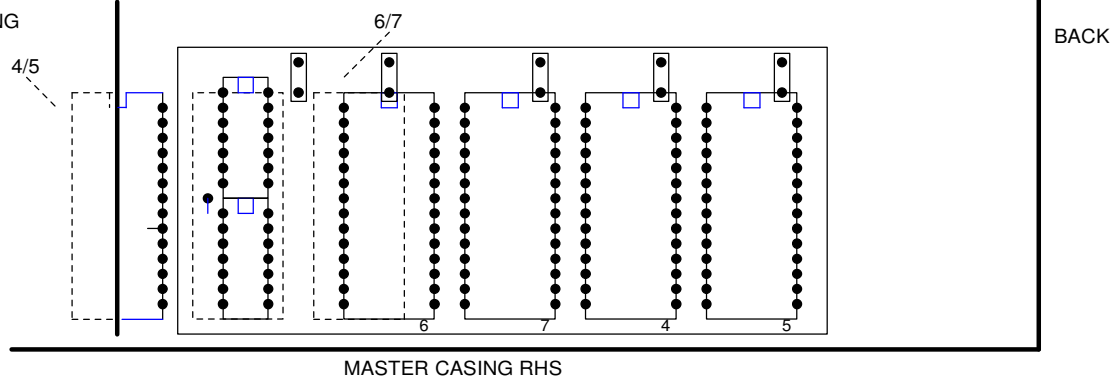

FITING INSTRUCTIONS

INSERT 16K EPROMS INTO EXTENSION BOARD THEN
PLUG FLYING LEAD INTO PIN 20 OF SOCKET 4/5
PLUG EXTENSION BOARD INTO SOCKET 6/7

LK 18 & 19 ON THE MASTER CIRCUIT BOARD SELLECTS SRAM OR ROM
COMPATIBLE WITH PIGGY BACK ROMS e.g. INTERWORD SPELLMASTER

Title 32-16 FIT		
Author		
File C:\Users\Derek\Pictures\32-16fit.dsn		Document
Revision 1.0	Date	Sheets 1 of 1